


Cain Petroleum

Tigard Chevron Site #1918, 13970 SW Pacific Hwy, Tigard, Oregon

Sample Location Map

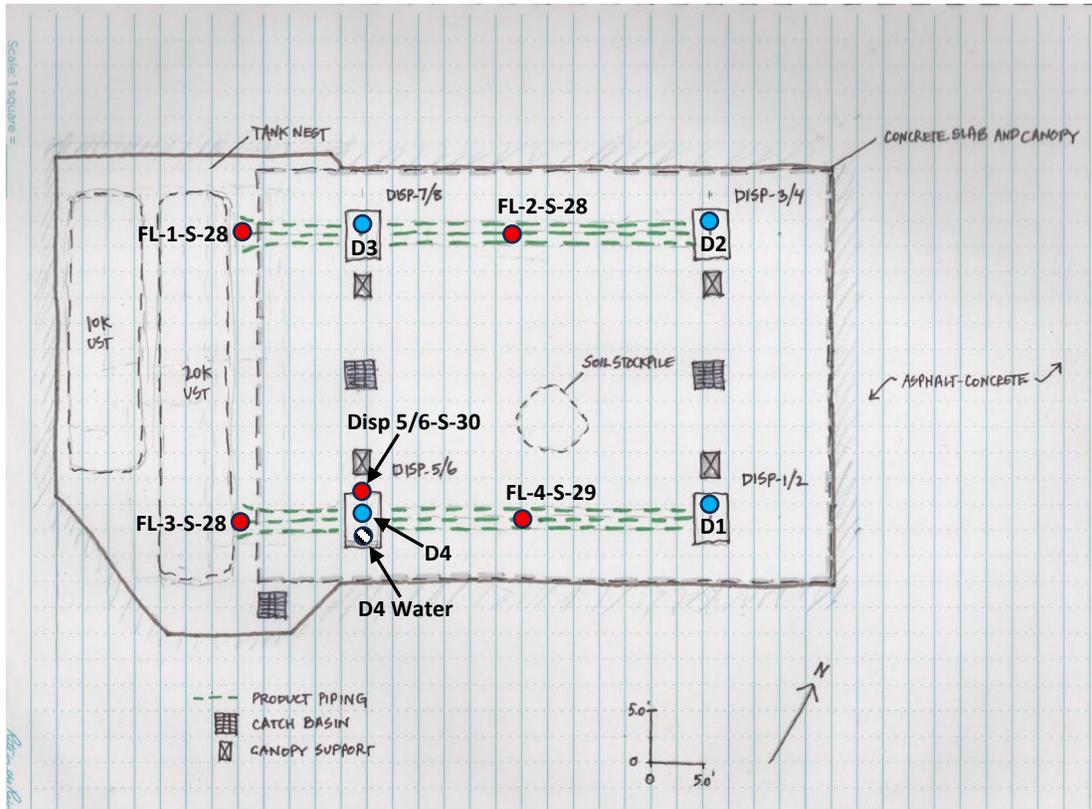

- Soil samples collected by Maul Foster and Alongi
- Soil samples collected by 4Cs
- Groundwater sample collected by 4Cs